

PROYU PY-ES3

1. Installation:

- 1. Check the power supply voltage.
- 2. Check the power supply current.
- 3. Check the power supply frequency.
- 4. Check the power supply phase.
- 5. Check the power supply type.
- 6. Check the power supply brand.
- 7. Check the power supply model.
- 8. Check the power supply specification.

2. Technical Specifications:

Power supply type	AC (Single phase)
Power supply brand	PROYU
Power supply model	PY-ES3
Power supply voltage	110V-220V (Selectable)
Power supply current	30A (Selectable)
Power supply frequency	15SEC (Selectable)
Power supply phase	Single phase

3. Safety Precautions:

- 1. Do not touch the power supply terminals.
- 2. Do not use the power supply in a wet or damp environment.
- 3. Do not use the power supply in a flammable or explosive atmosphere.



