

## RF standalone fingerprint access control PY-AC119

### Summary Guide:

- 1.Enroll fingerprint :Menu->user management->fingerprint enroll->new enroll->enroll No.->put your fingerprint twice on fingerprint window.
- 2.Enroll password:Menu->user management->user enroll->password(ID card) enroll->new enroll->enroll No.->input your password or read your card.
- 3.Set open time :Menu->setting->access control set->open time->1-99 seconds.
- 4.Use SD card convert and backup data: Menu->insert SD card->SD card management->...
- 5.Manager enroll:Menu->user management->manager enroll->fingerprint (password/card) enroll->new enroll->enroll No.->
- 6.Delete enroll data :Menu->user management->delete enroll data->enroll No.->...
- 7.Equipment capacity query :Menu->system information->...
- 8.Backup enroll I: Menu->user management->user enroll->fingerprint(ID card/password)enroll->choose Esc when new enroll->

### Specifications:

hardware platform	9200
fingerprint capacity	2000
password capacity	2000
communication	Mini-SD card/USB/RS485
record capacity	50000
LCD	122*32PIX
sensor	Vista
recognition speed	0.7 second
size	143(L)*80(W)*42(H)mm
weight	0.35KG
operating voltage	DC12V