Punch Card □□□□□□□□□□□□□□□□□□□□□□□□□□□□□□ PY-S880

□□□□□□□□□□□□:

□□□□ □□□□□□□	10000
□□□□□□□□□□□□□□	50000
□□□□□□□□□□□□□□□□□□□	ZEM510
□□□□□□□□□□□	RS232 / 485, TCP / IP, □□□□□ USB
□□□□□□□□□□□□□□□□	Workcode, SMS, DLST, □□□□□□□□□□□□□□□, □□□□□□□□□□□□□□□□□□□□□□□□□□□□□, □□□□□□□□□□□□□□□□□□□□□□□□□, □□□□□□□ T9, photo-ID, □□□□□, □□□□□□□□□□□□□□□□□
Access Control Interface □□□□□□□	3□ □□□□□□□□□□□□□□□□, □□□□□□□□□□□□□□□□, □□□□□□□□, □□□□, □□□□□□□□□□□□□□
□□□□□□□ Wiegand	□□□□□□□ & □□□□□□□□□
□□□□□□□□□□□□□□□□	ID / IC, Wi-Fi, GPRS
□□□□□	□□□□□□□ TFT □□□□ 3.5 □□□□
□□□□□□□□□□□□	12V DC 1.5A
□□□□□□□□□□□□□□□□□□□□□	0 ℃ - 45 ℃
□□□□□□□□□□□□□□□□□□□□□	20% -80%

□□□□□□□□□□□□□ RF □□□□□□□□□□□□□□□□□□□□

Packing list
For time attendance device:
In addition to the device, this package includes the following items:
Printed documentation and software CD
AC adapter
Accessory package
ID card (only for device with RFID function)
For access control device:
In addition to the device, this package includes the following items:
Printed documentation and software CD
Accessory package
ID card (only for the device with RFID function)
Contents may vary depending on the device configuration.

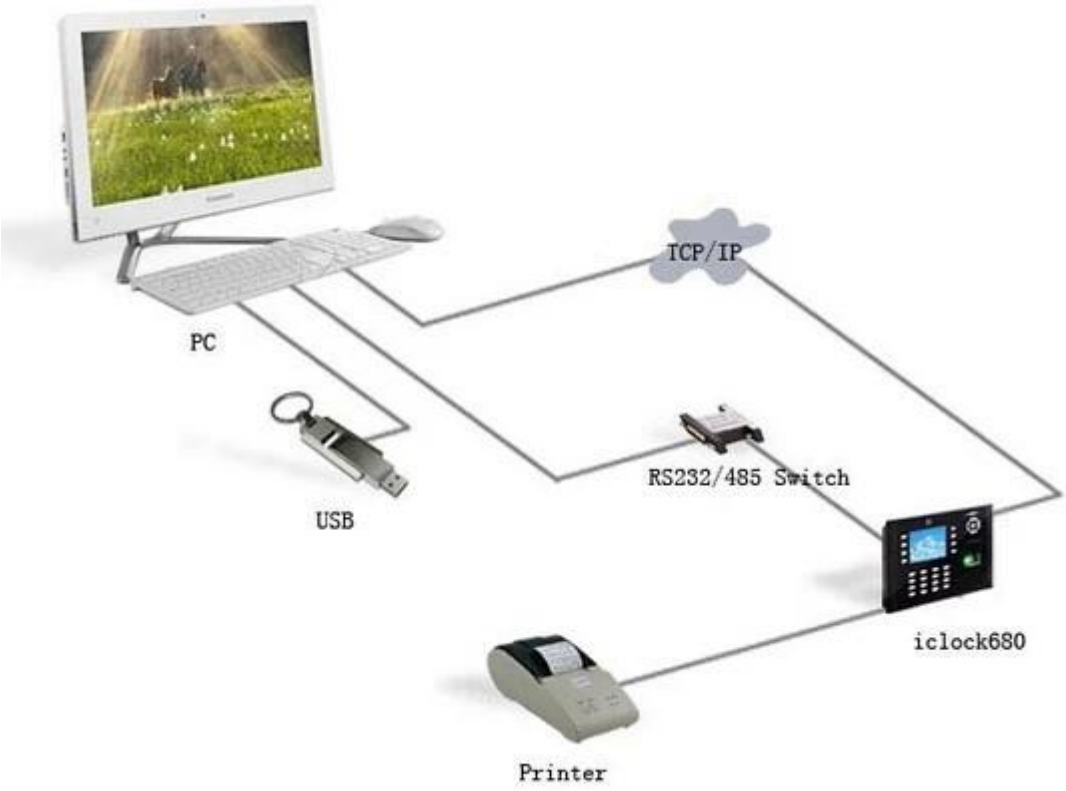
TCP/IP
PC
RS232/485 Switch
USB
iclock680
Printer